

## STEP 1

Unbox. Place sofa sections on floor, with armless piece in center.



## STEP 2

Screw in all connecting pens into connecting plates.




## STEP 3

Position yourself behind the sofa parts..... lift the back of the piece with connecting pins slightly off the ground (about an inch). Insert the pin into the top of the opening plate. Push the pieces together firmly until flush. Then, push the pin-piece down firmly to the floor until sofa pieces lock together. If they gap, you can take apart by lifting up sharply, and you can try again as shown below.....



Lift up the back of the piece with the connecting pin.

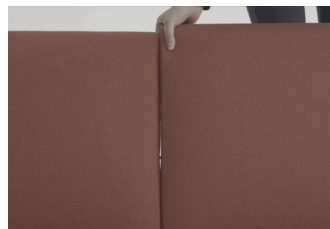

Insert pin onto the top of the opening on the connector plate, Push the pieces together firmly until flush.



Once together, press down firmly to lock the sections.

### WHAT'S INCLUDED:



Connecting Pin



Bolt & Washer



Legs



Connecting Boards


## STEP 4

Turn the sofa on it's back.. Close the clasps connecting each section (as shown).



## STEP 5

Put the connecting boards in place underneath. Place washers on bolts and use bolts to secure the pieces (Phillips head screw- driver included). It is easiest to start all 4 bolts by hand then finish with the screwdriver or cordless drill. Bolts don't need to be perfectly centered. Note: Bolts go in slot-shaped holes.

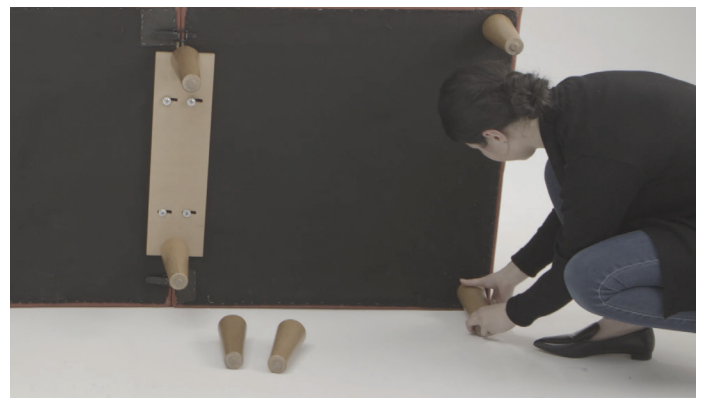

Screw legs into each leg hole tightly under each arm in the front and the back.

## STEP 6

Turn the sofa right side up and place the cushions on. You may hear a popping sound when you sit on the sofa for the first time. (This is normal, and will not continue after the pieces settle.) Relax and enjoy!

